


Option Module Installation: Automation (I/O Expansion)



CAUTION: Power down the drive before installing / removing option modules. Failure to do so may result in damage to the product. Refer to section *Safety Information* in the appropriate drive manual.

Figure 1-1 Installation of an SI option module on Unidrive M200 to M400 (sizes 2 to 4)

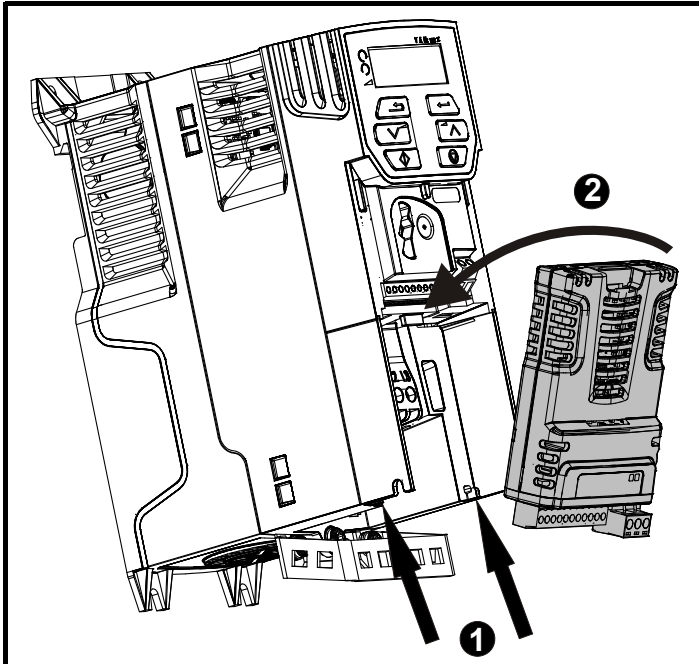


- With the option module tilted slightly backwards, align and locate the two holes in the rear of the option module onto the two tabs (1) on the drive.
- Place the option module onto the drive as shown in (2) until the module clicks into place. The terminal cover on the drive holds the option module in place, so this must be put back on.

NOTE


Option modules can only be installed on drives that have the option module slot functionality.

Figure 1-2 Installation of an SI option module on Unidrive M200 to M400 (sizes 5 to 8)

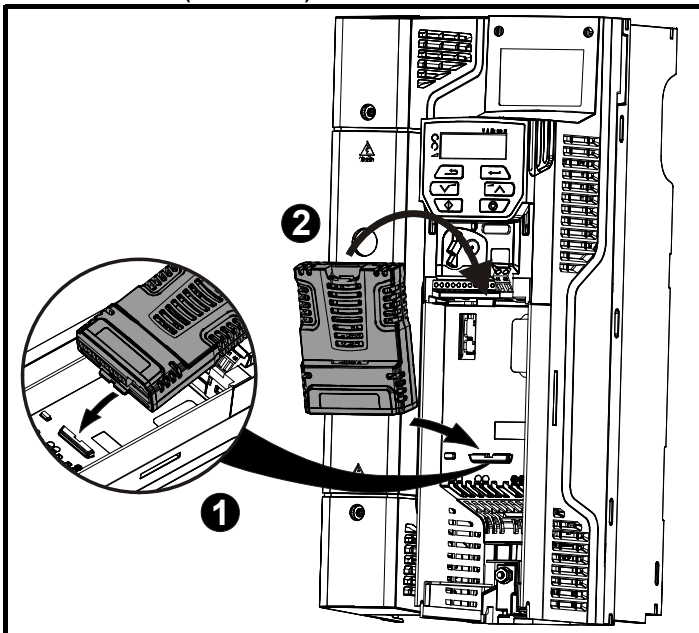

- Place the option module onto the drive as shown in (2) until the module clicks into place. The terminal cover on the drive holds the option module in place, so this must be put back on.

Figure 1-3 Installation of an SI option module on Unidrive M600 to M810

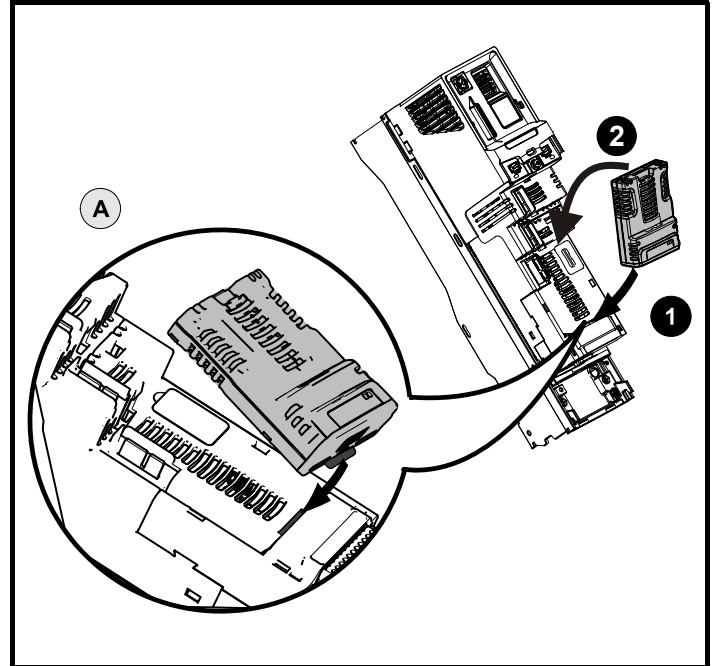


- Move the option module in direction shown (1/2).
- Align and insert the option module tab in to the slot provided, this is highlighted in the detailed view (A).
- Press down on the option module until it clicks into place.

NOTE

Option module slots must be used in the following order: Slot 3 (lower), Slot 2 (middle) and then Slot 1 (upper).



Module	Color	Terminal information																																																			
 <p data-bbox="175 347 239 376">SI-I/O</p>	Orange	<table border="1" data-bbox="646 123 1077 161"> <tr> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td> </tr> </table> <table border="1" data-bbox="571 174 1104 362"> <thead> <tr> <th colspan="4">PL1 Function</th> </tr> </thead> <tbody> <tr> <td>1</td><td>0V common</td><td>7</td><td>Analog input 1/Digital input 5</td> </tr> <tr> <td>2</td><td>Digital input/output 1</td><td>8</td><td>Analog input 2/Digital input 6</td> </tr> <tr> <td>3</td><td>Digital input/output 2</td><td>9</td><td>Analog input 3/Digital input 7</td> </tr> <tr> <td>4</td><td>Digital input/output 3</td><td>10</td><td>0V common</td> </tr> <tr> <td>5</td><td>Digital input/output 4</td><td>11</td><td>Analog output 1/Digital input 8</td> </tr> <tr> <td>6</td><td>0V common</td><td></td><td></td> </tr> </tbody> </table>	1	2	3	4	5	6	7	8	9	10	11	PL1 Function				1	0V common	7	Analog input 1/Digital input 5	2	Digital input/output 1	8	Analog input 2/Digital input 6	3	Digital input/output 2	9	Analog input 3/Digital input 7	4	Digital input/output 3	10	0V common	5	Digital input/output 4	11	Analog output 1/Digital input 8	6	0V common			<table border="1" data-bbox="1204 123 1324 161"> <tr> <td>21</td><td>22</td><td>23</td> </tr> </table> <table border="1" data-bbox="1165 174 1382 286"> <thead> <tr> <th>PL2</th><th>Function</th> </tr> </thead> <tbody> <tr> <td>21</td><td>Relay 1</td> </tr> <tr> <td>22</td><td>Relay common</td> </tr> <tr> <td>23</td><td>Relay 2</td> </tr> </tbody> </table>	21	22	23	PL2	Function	21	Relay 1	22	Relay common	23	Relay 2
1	2	3	4	5	6	7	8	9	10	11																																											
PL1 Function																																																					
1	0V common	7	Analog input 1/Digital input 5																																																		
2	Digital input/output 1	8	Analog input 2/Digital input 6																																																		
3	Digital input/output 2	9	Analog input 3/Digital input 7																																																		
4	Digital input/output 3	10	0V common																																																		
5	Digital input/output 4	11	Analog output 1/Digital input 8																																																		
6	0V common																																																				
21	22	23																																																			
PL2	Function																																																				
21	Relay 1																																																				
22	Relay common																																																				
23	Relay 2																																																				

For full details on any of the option modules, please refer to the appropriate option module user guide.

